









## Elite Controller Installation Instructions

**Mounting System** - A mounting system that provides for various mounting options has been provided with this enclosure. To connect the mounting brackets, turn the enclosure such that the back side is visible. place the mounting brackets over the octagon bosses either horizontally, diagonally, or vertically, and fasten them with the 1/4-20 x 1/2 L 304 SS, countersunk phillips drive screws provided (torque limit = 10-14 in-lbs.).



Once all the mounting brackets are securely attached to the back of the unit, the enclosure can be mounted in either a vertical or horizontal orientation using wood screws.

**DO NOT DRILL INTO THE ELITE REMOTE BOX.  
DOING SO WILL VOID THE WARRANTY ON THE REMOTE.  
USE THE PROVIDED MOUNTING BRACKETS TO  
SECURELY INSTALL THE UNIT.**

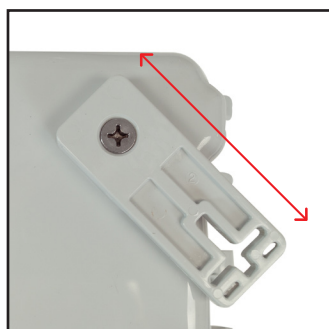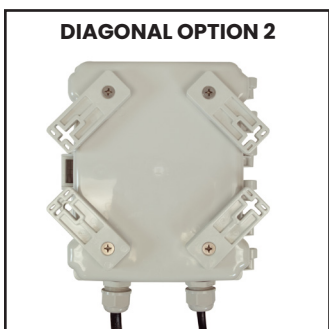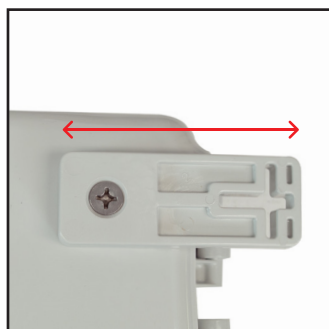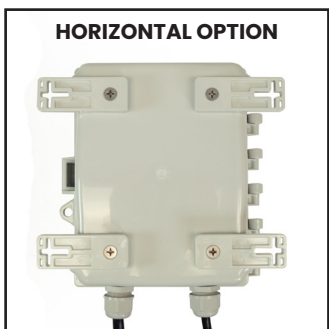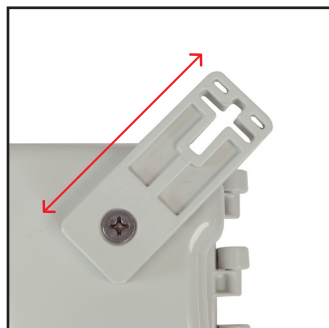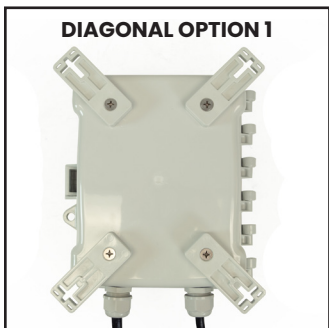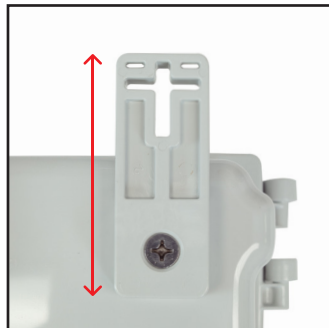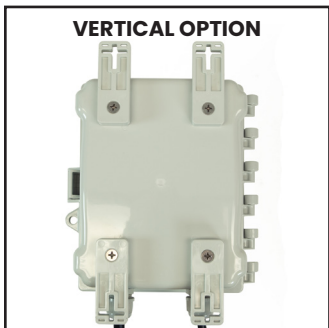

**DO NOT DRILL INTO THE ELITE REMOTE BOX.  
DOING SO WILL VOID THE WARRANTY ON THE REMOTE.  
USE THE PROVIDED MOUNTING BRACKETS TO  
SECURELY INSTALL THE UNIT.**